




# Coir Log Rolls Installation Guide

- Part drive into water margin, 4 stakes per Bio-roll.
- Stakes are typically 1.2 m long x 65 mm average diameter quarter cut chestnut stakes at 0.8m centers.
- Place Bio-rolls into position, embankment side of fixing stakes with 100mm of roll above water level.
- Tie ends of Bio-rolls together using suitable twine or wire. Fully drive in stakes to the top of the Bio-roll.
- Tie Bio-rolls onto stakes using suitable twine or wire.
- Backfill where necessary to rear of Bio-rolls. Additional planting can be incorporated into the backfill material.
- Consideration should be given to bird protection netting if necessary.

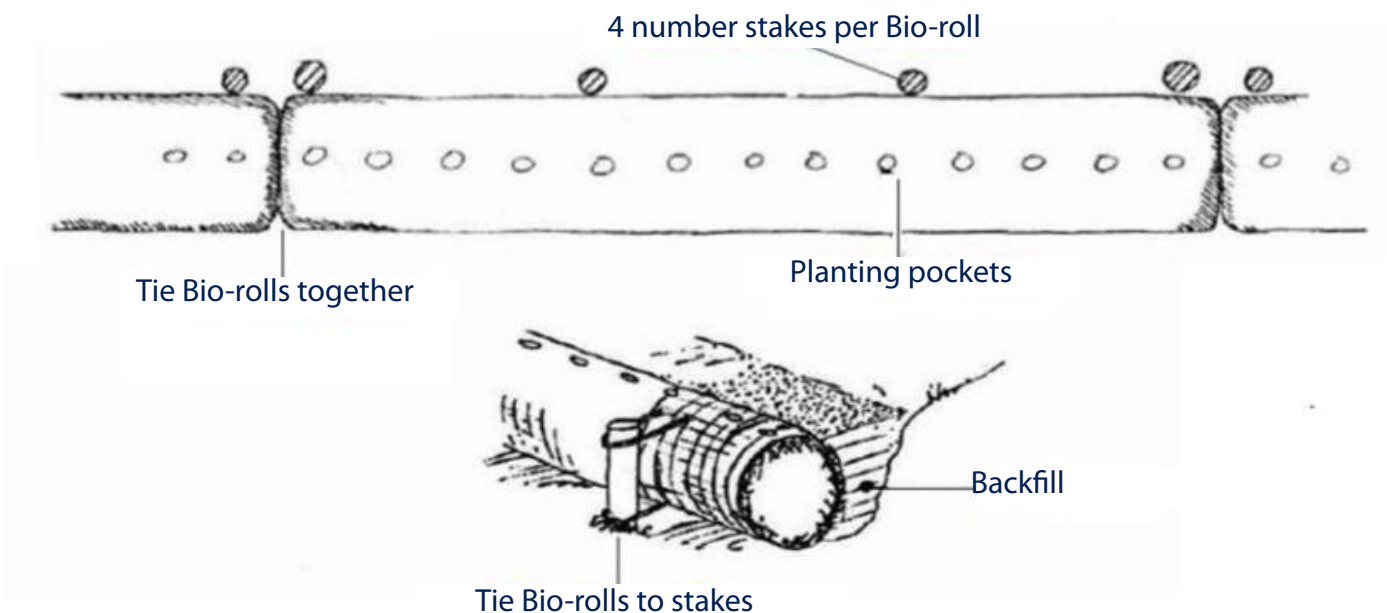

Green-tech endeavour to ensure that the information given on this technical data sheet is accurate, but accept no liability for its use or its suitability for particular application.

Rabbit Hill Business Park, Great North Road, Arkendale, Knaresborough HG5 0FF

T: 01423 332100 E: sales@green-tech.co.uk W: www.green-tech.co.uk Facebook: @greentechuk Twitter: @greentechltd